

Virtual Device-O



ZEBRA

User Guide

© 2018 ZIH Corp. All rights reserved. ZEBRA and the stylized Zebra head are trademarks of ZIH Corp., registered in many jurisdictions worldwide. All other trademarks are the property of their respective owners.

Information in this document is subject to change without notice.

For further information regarding legal and proprietary statements, please go to:

COPYRIGHTS: <http://www.zebra.com/copyright>

WARRANTY: <http://www.zebra.com/warranty>

END USER LICENSE AGREEMENT: <http://www.zebra.com/eula>

SOFTWARE: <http://www.zebra.com/linkoslegal>

Terms of Use

Proprietary Statement This manual contains proprietary information of Zebra Technologies Corporation and its subsidiaries (“Zebra Technologies”). It is intended solely for the information and use of parties operating and maintaining the equipment described herein. Such proprietary information may not be used, reproduced, or disclosed to any other parties for any other purpose without the express, written permission of Zebra Technologies.

Product Improvements Continuous improvement of products is a policy of Zebra Technologies. All specifications and designs are subject to change without notice.

Liability Disclaimer Zebra Technologies takes steps to ensure that its published Engineering specifications and manuals are correct; however, errors do occur. Zebra Technologies reserves the right to correct any such errors and disclaims liability resulting therefrom.

Limitation of Liability In no event shall Zebra Technologies or anyone else involved in the creation, production, or delivery of the accompanying product (including hardware and software) be liable for any damages whatsoever (including, without limitation, consequential damages including loss of business profits, business interruption, or loss of business information) arising out of the use of, the results of use of, or inability to use such product, even if Zebra Technologies has been advised of the possibility of such damages. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Contents

- 2 • Contents 3**
- 1 • Introduction 6**
 - Overview 7
 - Virtual Device-O Features 7
 - Supported Printers 8
 - Configuring Network Connectivity 8
 - Notes 9
- 2 • Install, Register, and Enable Virtual Device-O 10**
 - Acquiring the Virtual Device Application 11
 - Downloading the Virtual Device-O Application 12
 - Adding Printers to the ZDownloader List 12
 - Modifying Printers in the List 18
 - Deleting Printers from the List 19
 - Downloading the Virtual Device App to Selected Printers 20
 - Canceling a Download in Progress 22
 - Registering the Virtual Device 23
 - ZDownloader Log File 23
 - Enabling the Virtual Device 24
 - Using an SGD Command 24
 - Using the User Menus 24

3 • Commands 35

- Supported Commands 37
 - Line Print Commands 37
 - Easy Print Commands 38
 - Query Commands 38
 - PK80 Commands 39
 - MF8i Commands 39
- Line Print Commands 40
 - CR 40
 - ESC ! n 40
 - ESC @ 41
 - ESC A n 41
 - ESC B, ESC E 42
 - ESC EZ 43
 - ESC Hn 43
 - ESC Q n1n2 43
 - ESC R n 44
 - ESC V n1 n2 45
 - ESC w n 46
 - FF 47
 - LF 47
 - SI 47
 - SO 48
- Easy Print Commands 49
 - Ahead Command {AHEAD:nnn} 49
 - Back Command {BACK:nnn} 49
 - Line Printer Mode {LP} 49
 - Print {Print...} 50
 - Print {Print...} (continued) 51
 - Print {Print...} (continued) 52
 - Print {Print...} (continued) 53
 - Status {S} 54
 - Self Test Printout {TP} 54
 - Limited Self Test Printout {TP1} 54

- Query Commands 55
 - ESC {BT?} 55
 - ESC {CF?} 56
 - ESC {FM?} 58
 - ESC {FN?} 59
 - ESC {GR?} 60
 - ESC {MY?} 61
 - ESC {PH?} 62
 - ESC {RE!} 62
 - ESC {ST?} 63
 - ESC {VR?} 65
 - Query Command Override 66
- Set/Get/Do (SGD) Commands 67
 - apl.enable 67
 - apl.version 67
 - apl.framework_version 68
 - apl.o.graphics_byte_width 68
- 4 • Supported Fonts 69**
 - Supported Fonts 70
- 5 • ZDownloader Utility 74**
 - Downloading the ZDownloader Utility 75
 - Installing the ZDownloader Utility 76
- 1 • Index 79**

Introduction

This section describes the features and functions of a Zebra printer that is running the Virtual Device-O application.

Contents

Overview	7
Virtual Device-O Features	7
Virtual Device-O Features	7
Configuring Network Connectivity	8
Notes	9

Overview

The Virtual Device-O application enables Zebra Link-OS printers to work with many host systems that are using Datamax-O'Neil® printers. In most cases, no changes will be required to the host application. This feature can help customers to make a smooth transition to Zebra printers and save them the time and expense of having to rewrite their host software.

Virtual Device-O Features

The Virtual Device-O application:

- Uses existing features of Zebra printers, when available.
- Offers fonts similar to the original device. These fonts will use 120 KB or more of memory space.
- Supports the Bluetooth®, Serial, Ethernet, WLAN, and USB interfaces.
- Offers many outline fonts, barcodes, and specific commands and features of target printer models (see [Supported Fonts on page 69](#)).
- Provides support of Datamax-O'Neil commands (see [Commands on page 35](#)).

Supported Printers

This manual describes the Virtual Device-O language for Zebra Link-OS printers and should be used by any person who needs to support that language on one of the following Zebra printers:

Printer	Firmware
iMZ Series	V73.19.6Z and later
QLn Series	V68.19.6Z and later
ZT200 Series	V72.19.6Z and later
ZT400 Series	V75.19.7Z and later
ZT510	V80.20.02Z and later
ZT600 Series	V80.20.02Z and later
ZD400 Series	V77.19.14Z or V84.20.05Z and later
ZD500 Series	V74.19.6Z and later
ZD600 Series	V84.20.05Z and later
ZQ300 Series	V81.20.06Z and later
ZQ500 Series	V76.19.10Z and later



Note • The Virtual Device-O language is supported only on 203 dpi printers.

For complete printer operation, use this manual in combination with the User Guide for your printer.

Configuring Network Connectivity

Your printer may be equipped with one or more of the following interfaces:

- Bluetooth—For detailed information to connect a Bluetooth device, refer to the *Bluetooth User Guide*.
- Wired print server—For detailed information, refer to the *ZebraNet Wired and Wireless Print Servers User Guide*.
- Wireless print server—For detailed information, refer to the *ZebraNet Wired and Wireless Print Servers User Guide*.

For other connectivity options, refer to the User Guide for your printer. Copies of these manuals are available at <http://www.zebra.com/manuals>.

Notes

- Other command languages are disabled when running Virtual Device-O. However, Set/Get/Do (SGD) commands and file download all operate properly with Virtual Device-O enabled.
- Virtual Device-O fonts can only be used with Virtual Device-O commands. They cannot be used with other languages.
- The Virtual Device-O mode application will not respond to CPCL, ZPL, or EPL commands. Instead, commands will be processed by the Virtual Device-O application.

Install, Register, and Enable Virtual Device-O

This section provides you with instructions on how to install and enable the Virtual Device-O application on one or more Zebra printers.

Contents

Acquiring the Virtual Device Application	11
Downloading the Virtual Device-O Application.	12
Using ZDownloader	12
Adding Printers to the ZDownloader List	12
Auto-Detect Printers.	13
Manually Add Printers	14
Modifying Printers in the List	18
Deleting Printers from the List	19
Downloading the Virtual Device App to Selected Printers	20
Registering the Virtual Device	23
Enabling the Virtual Device	24
Using an SGD Command	24
Using the User Menu	24
QLn420 Printers.	25
QLn320 and QLn220 Printers	28
Supported ZTxxx and ZDxxx PRINTERS with a Display	31

Acquiring the Virtual Device Application

To get the Virtual Device app, perform the following from your computer:

1. Open a web browser and navigate to <http://www.zebra.com/virtualdevices>.
2. Locate your printer type in the list of printers, and then click **Download Now**.
3. Fill out the information on the Virtual Device Download Request form.
4. Click **Submit**.
5. Read the End User License Agreement.
6. Click **Accept and Begin Download Now**.
Your browser prompts you to open or save the archive containing the Virtual Device app.
7. Save and store the Virtual Device app archive file to your computer.
The archive file contains the following:
 - The Virtual Device `.NRD` file to be downloaded to a Zebra printer.
 - A `.txt` file that contains the SGD command for immediately activating the Virtual Device app.
8. Extract the files from the archive to your computer.

Downloading the Virtual Device-O Application


Zebra provides two options to download the Virtual Device-O app to the printer.

- On a computer with the ZDownloader Utility
The ZDownloader Utility is the only method shown in this manual. For instructions on how to download and install the ZDownloader Utility, see [ZDownloader Utility on page 74](#).
- On an Android device with the Zebra Printer Setup Utility for Android Devices (available for free on Google Play™)
For information on using the Zebra Printer Setup Utility for Android Devices and to download the user guide, navigate to <http://www.zebra.com/setup>.

Using ZDownloader

The ZDownloader application can update Virtual Device-O files in Zebra printers connected by Serial, Parallel, USB, and IP Ethernet networks.

Figure 1 • Initial ZDownloader Screen

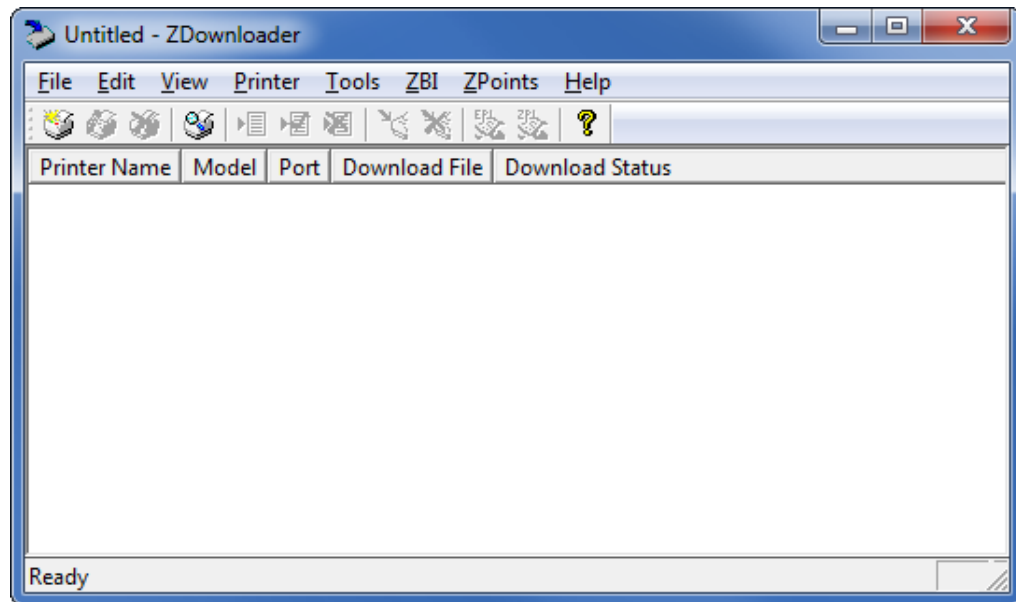

Adding Printers to the ZDownloader List

There are two ways to add printers to the list:

- Auto-Detect (use for USB or IP Ethernet interfaces)
- Manual add (use for Serial, Parallel, or IP Ethernet interfaces)

If your printer is connecting via the serial or parallel interfaces, or is not detected by using the Auto-Detect method, use the Manual Add method.


Auto-Detect Printers

Use Auto-Detect for USB or IP Ethernet interfaces.




Note • Ethernet connected printers are detected by the application broadcasting a UDP packet out onto the network. UDP port number 4201 is used for the discovery process. Some networks filter out UDP packets. This means that the ZDownloader utility may not be able to detect all of the printers on your network. See your network administrator for more information. If you are not able to Auto-Detect your network printers, follow instructions for manually adding a printer.

USB printers can only be added by using Auto-Detect. The ZDownloader utility can support as many USB printers as your computer can support (most computers typically can support up to 255).

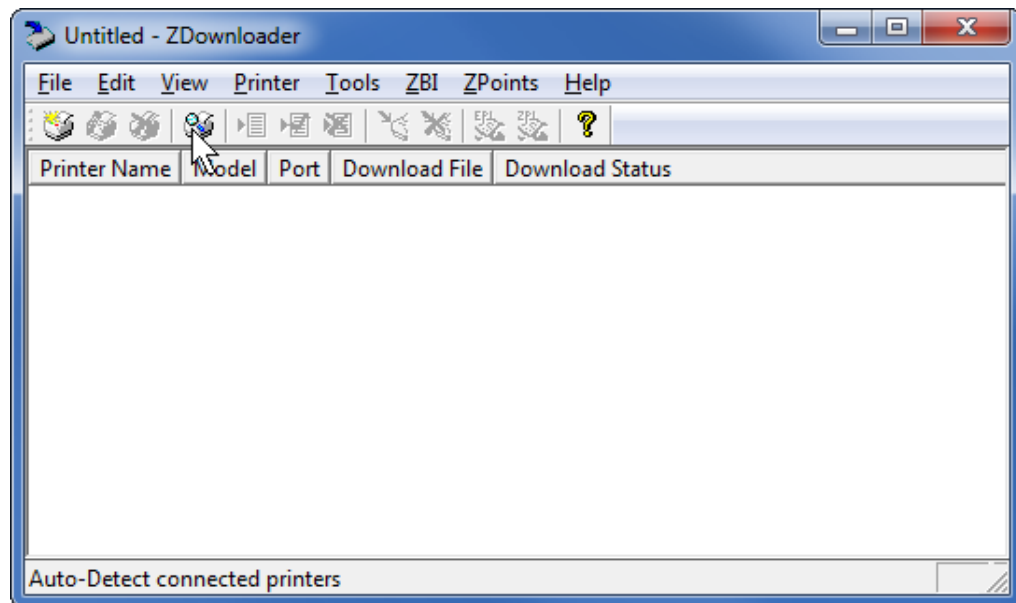

To Auto-Detect printers connected via the USB or IP Ethernet interfaces, perform the following steps:


1. In the ZDownloader toolbar, select **Printer > Auto-Detect**.
OR
Right-click in the ZDownloader window and select **Auto-Detect Printers**.
The printers detected are added to the printer list.

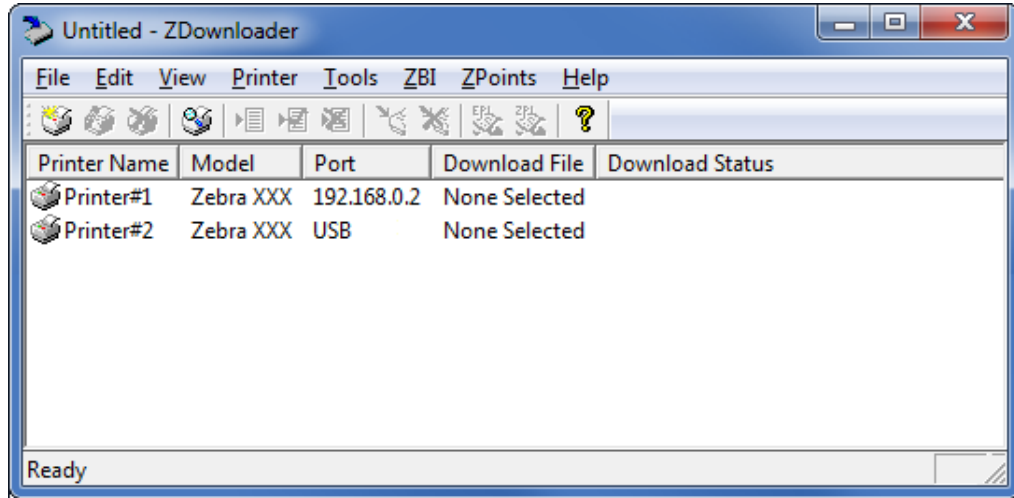

Manually Add Printers

To manually add printers connected via the Serial, Parallel, or Network interfaces, perform the following steps:

1. In the ZDownloader toolbar, select **Printer > Add....**
OR
Right-click in the ZDownloader window and select **Add Printer....**
The following window appears.

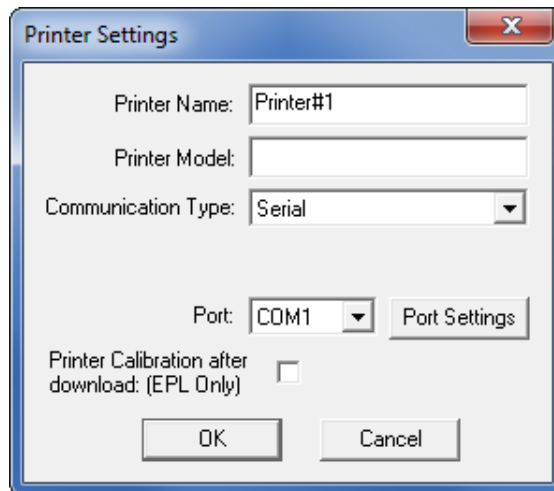


2. Add a printer name and your printer model in the appropriate fields.
3. What type of printer are you adding?

If you are adding a...	Then...
Serial Printer	Go to <i>Adding a Serial Printer</i> .
Parallel Printer	Go to <i>Adding a Parallel Printer</i> on page 17.
Network Printer	Go to <i>Adding a Network Printer</i> on page 18.


Adding a Serial Printer

4. Select the serial port to which the printer is connected.

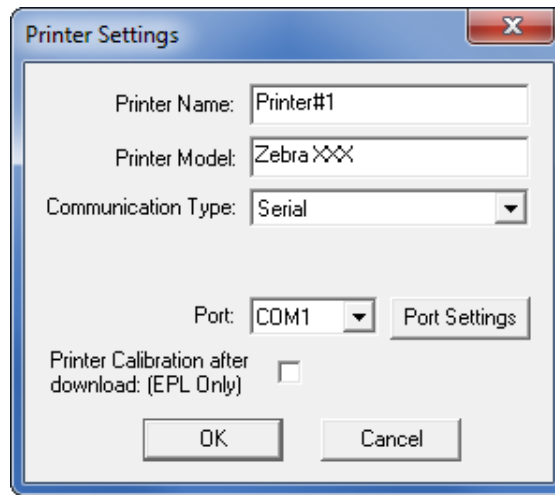

5. Click Port Settings.

The following window appears.

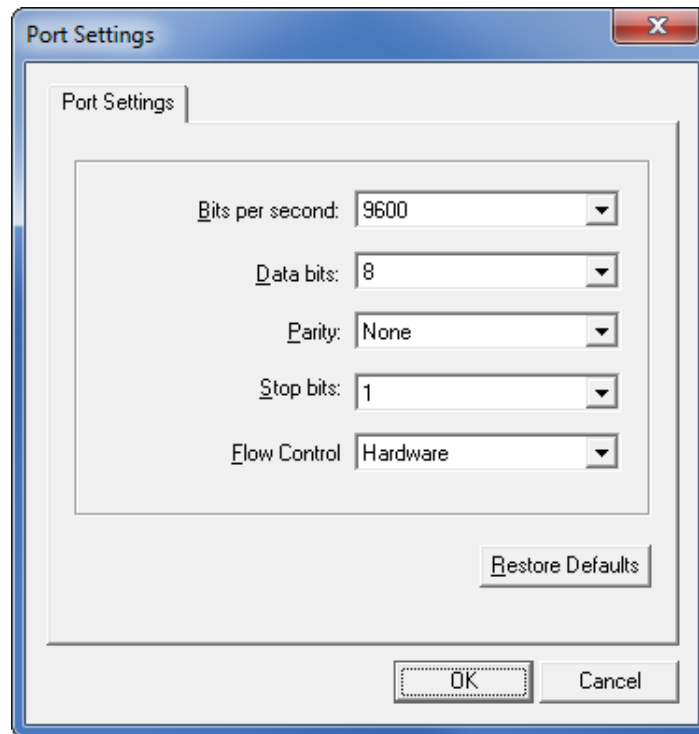

6. Adjust the settings as necessary. The printer's serial port settings must match the computer's serial port settings. For more information about the settings, refer to the User Guide for your printer.


7. Click **OK** to save the port settings.

8. Click **OK** to add the printer.

Adding a Parallel Printer

9. Set **Communication Type** to **Parallel**.

The available parallel ports will be shown in the Port drop-down box.

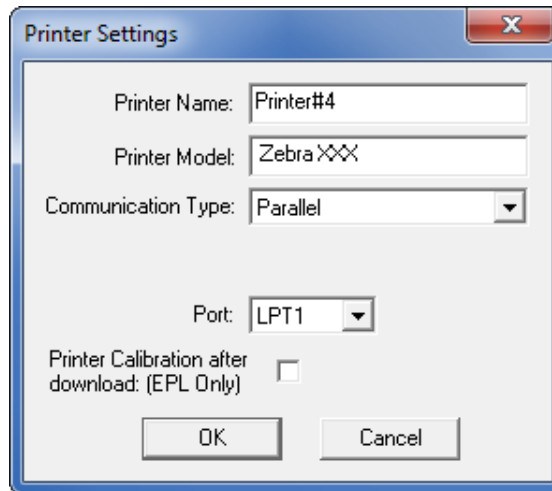


10. Select the port to which the printer is connected. No additional configuration is necessary.

11. Click **OK** to add the printer.

Adding a Network Printer

12. Set **Communication Type** to **Network**.

The following window appears.

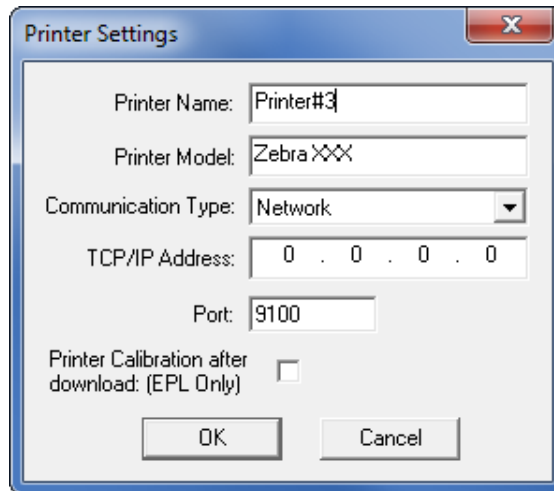


13. Enter the printer's IP address.
14. Click **OK** to save the network settings.
15. Click **OK** to add the printer.


Modifying Printers in the List

To change printer settings for a printer in the list, perform the following steps:

1. Select the printer to modify.

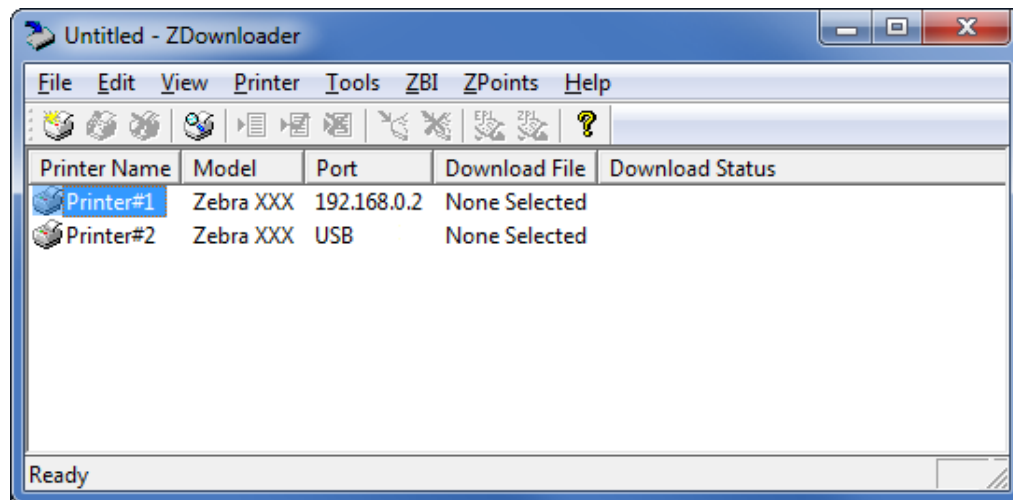

2. In the toolbar, select **Printer > Modify Printer....**
 OR
 Right-click on the printer and select **Modify Printer....**
 The printer settings for the selected printer are displayed.

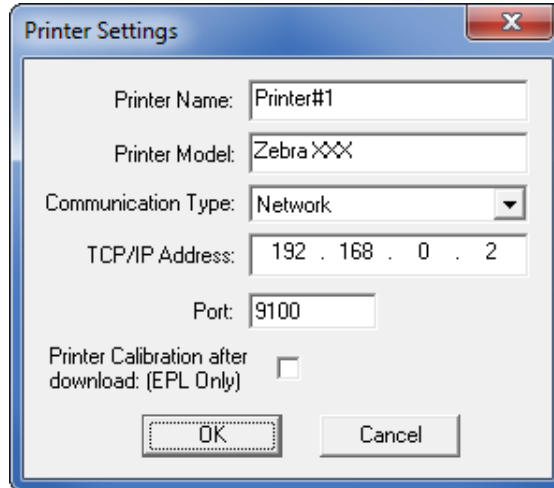


3. Modify the settings as desired.
4. Click **OK** to save the settings.


Deleting Printers from the List

To delete printers from the list, perform the following steps:

1. Select one or more printers to delete.

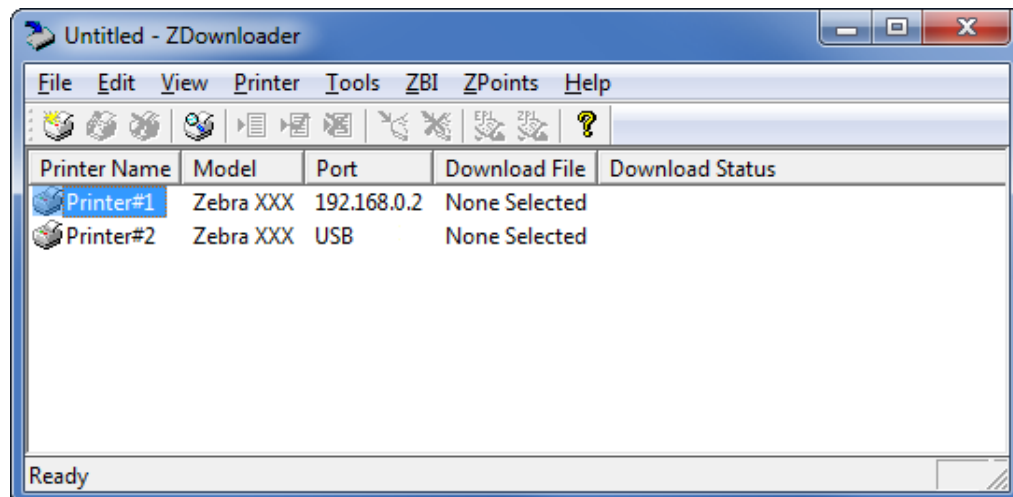

- In the toolbar, select **Printer > Delete**.
OR
Right-click on one of the selected printers and select **Delete Printer(s)**.
The printer is removed from the list.

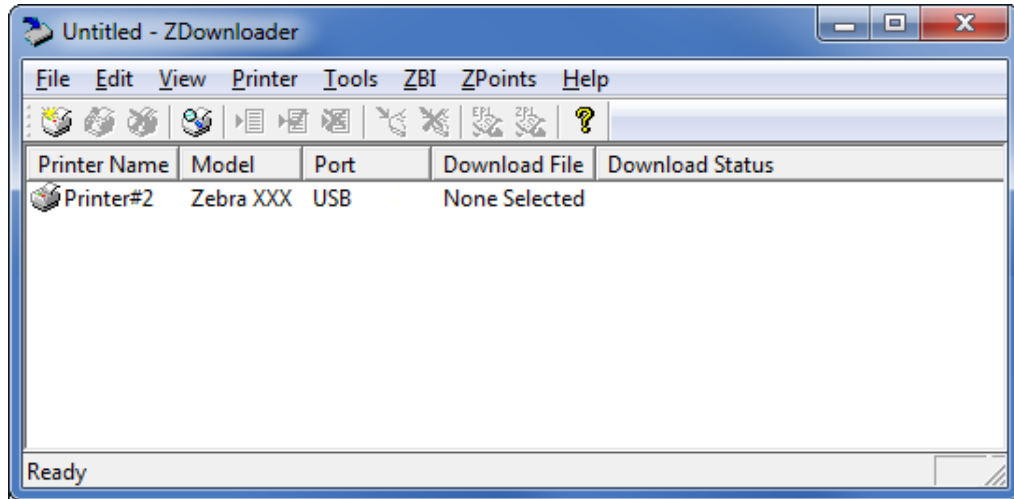

Downloading the Virtual Device App to Selected Printers


To download the Virtual Device-O app to your printer(s), you must select the file to send to each printer. ZDownloader, by default, downloads files to one printer at a time. If you have multiple printers to update and want to speed up the process, you can increase the number of simultaneous downloads.



Note • More simultaneous downloads require more of your computer resources. Some computers may slow down with simultaneous downloads or as more printers are added for simultaneous downloading.

To allow simultaneous downloads, perform the following step:


- Click **Tools > Options...**
The following prompt appears.

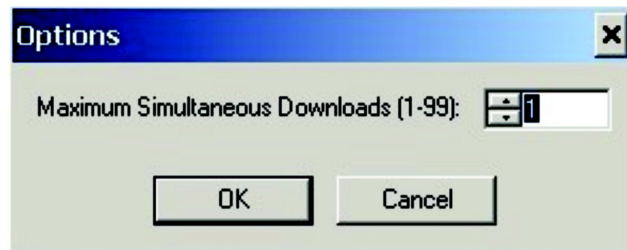


- Raise the number shown to allow multiple simultaneous downloads.
- Click **OK**.

To download the Virtual Device app file to one or more printers, perform the following steps:


1. Select the printers to which you want to download the Virtual Device-O app file. To select multiple printers, hold down the Ctrl or Shift key, and then click on the desired printers.

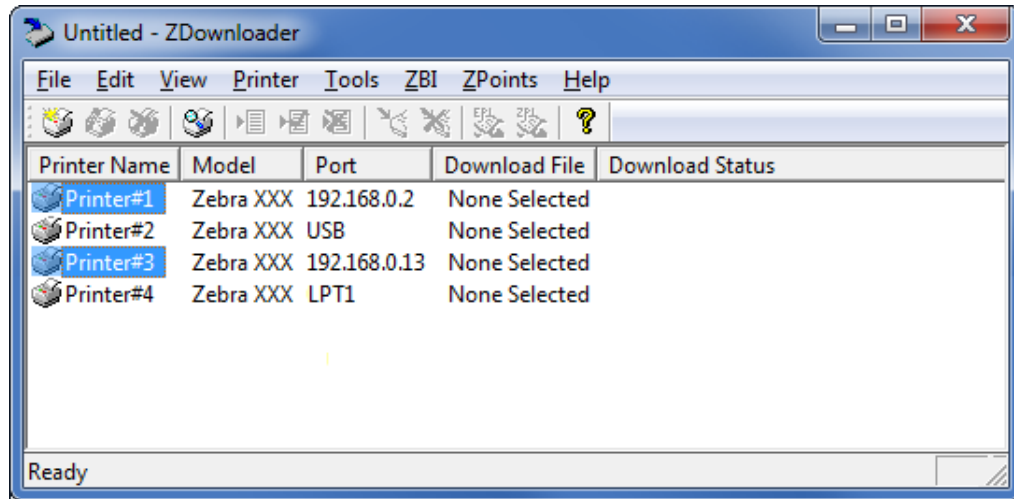

2. In the toolbar, select **File > Select Firmware File....**
 OR
 Right-click on one of the selected printers and select **Select Firmware File....**
3. Navigate to the Virtual Device app file that you acquired previously.
4. Click Open.
 The file that you selected appears under Download File for the selected printers. Printers that are present in the list but that do not have a file selected will be ignored when Downloading starts.

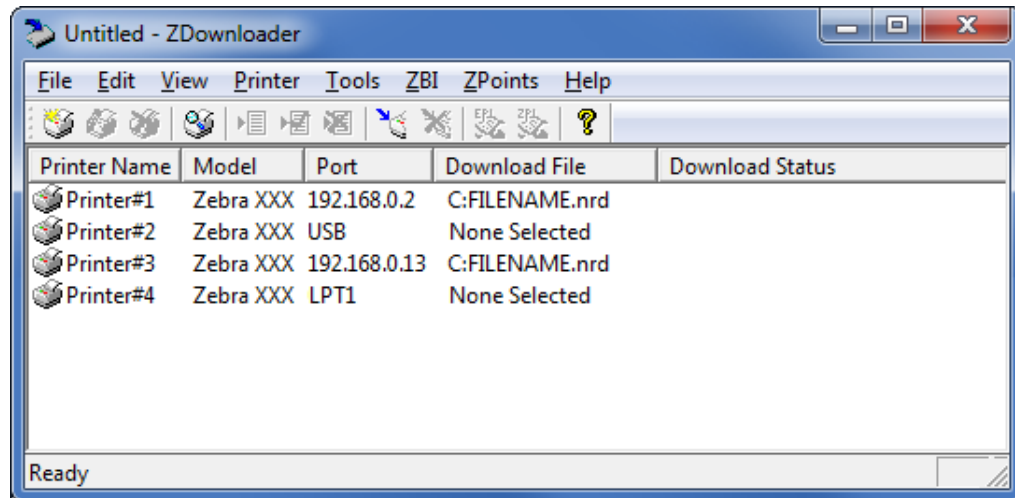

5. Start the download process by doing one of the following:
 - Select **Printer > Download to Selected**.
 - Select the printer(s) of interest and select the **Printer** and then select **Download To Selected**.
6. In the toolbar, select **Printer > Download All**.
OR
Right-click in the ZDownloader window and select **Download All**.
After downloading has begun, the progress of each printer will be shown in the Download Status column.

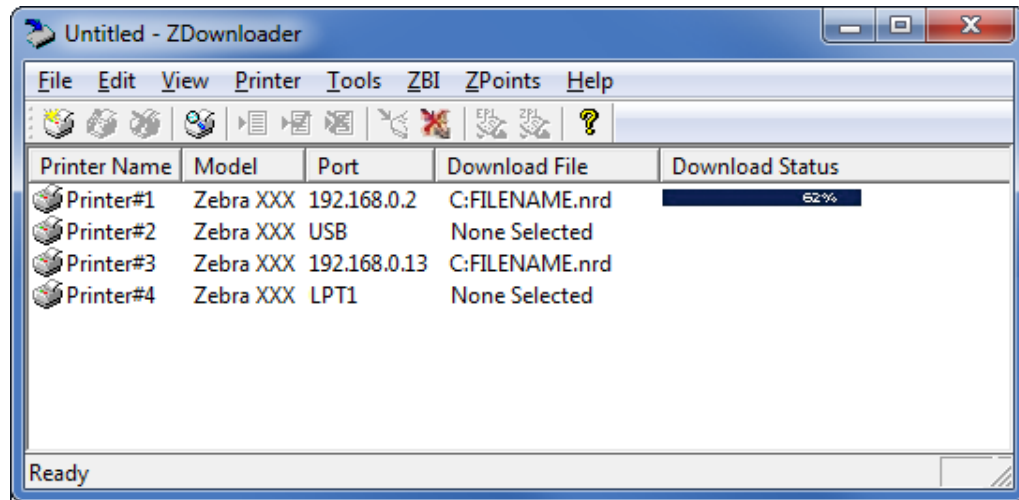

Canceling a Download in Progress

The Cancel Download toolbar button and the Printer > Cancel Download menu options become active when the files are downloading.

To cancel downloading to ALL printers in the list, perform the following step:

1. Click **Printer > Cancel Download**.
OR
Right-click in the ZDownloader window and select **Cancel Download**.

To cancel downloading to SPECIFIC printers in the list, perform the following step:

1. Select one or more printers with a download in progress.
2. Click **Printer > Cancel Download**.
OR
Right-click on a selected printer and select **Cancel Download**.

Registering the Virtual Device

ZDownloader maintains a log file of all items downloaded to a Zebra printer along with the printer serial number. You can register your Virtual Device installation with Zebra Repair and Tech Support to ensure that a printer sent in for repair is returned with the Virtual Device installed, and when engaging Zebra Tech Support, they will have records of the item being loaded. To register your Virtual Device installation, you must send the log file created by ZDownloader to the Zebra log file management group.

ZDownloader Log File

To send the log file, complete these steps:

1. Based on your operating system, navigate to the appropriate folder:
 - Microsoft® Windows® XP
`C:\Program Files\Common Files\FirmwareDownloader`
 - Microsoft Windows 7, Windows 8, and Windows 10
`C:\ProgramData\Zebra Technologies\Firmware Downloader and ZBI Key Manager`
2. Copy the log file (`DownloadLog.txt`), and email to Zdownloader@zebra.com.
If you are downloading from several computers, you need to send the log file from each computer. If you download files to printers on one day and do not send the file the same day, please note this in your email so that the log file management group picks up the previous load detail. Otherwise, they only pick up the load data for the day that the log file is sent.

Enabling the Virtual Device

You can enable Virtual Device-O by sending a Set/Get/Do (SGD) command to the printer or by selecting the option through the printer's menus.

Using an SGD Command

To enable Virtual Device-O on your printer, send the following command:

```
! U1 setvar "apl.enable" "apl-d"
```

To disable Virtual Devices on your printer and return to normal function, send the following command:

```
! U1 setvar "apl.enable" "none"
```

You must restart the printer after changing the value of `apl.enable`. For more information about this SGD command, see [apl.enable on page 67](#).

Using the User Menus

This section includes instructions for the following printers:

- [QLn420 Printers on page 25](#)
- [QLn320 and QLn220 Printers on page 28](#)
- [Supported ZTxxx and ZDxxx PRINTERS with a Display on page 31](#)


If necessary, refer to the User Guide for your printer for additional information about your printer's control panel.

QLn420 Printers


1. From the printer's idle display screen, press the **LEFT SOFT KEY** to select the Home icon.




The printer displays the Home Menu.

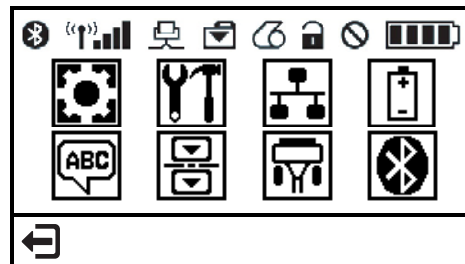

2. Use the **ARROWS** to navigate to the **LANGUAGE** menu.

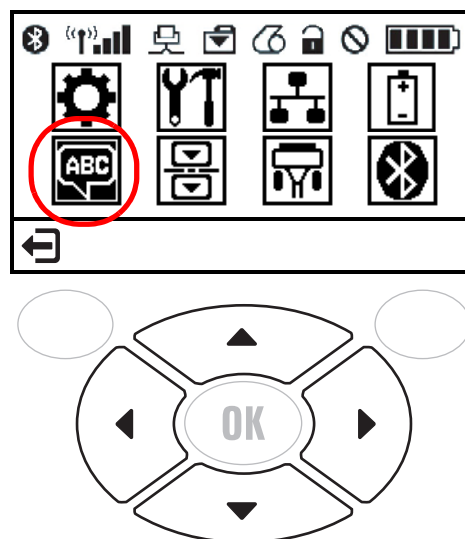



3. Press **OK**.

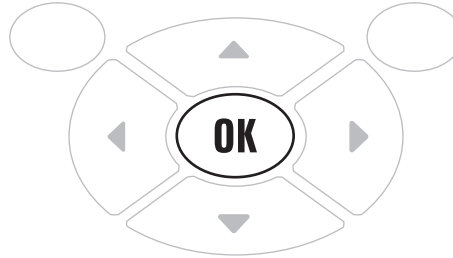



The printer displays the **LANGUAGE** selection screen.




4. Use the **LEFT** or **RIGHT ARROW** to navigate to the **VIRTUAL DEVICE** selection screen.

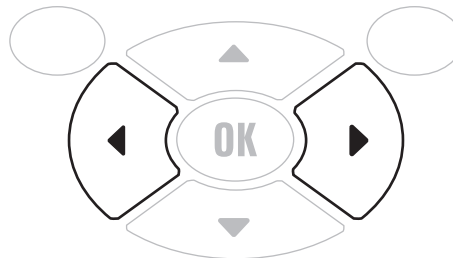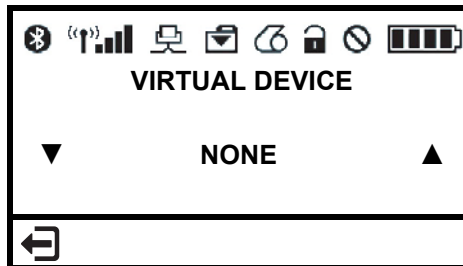

5. Use the **UP** or **DOWN ARROW** to scroll to the **APL-D** option.

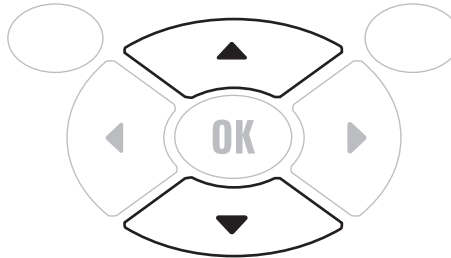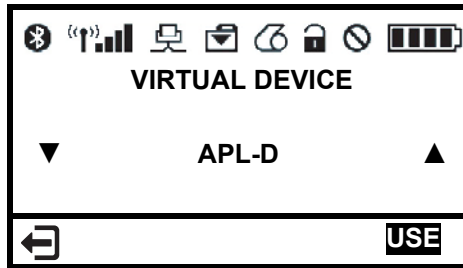


6. Press the **RIGHT SOFT KEY** to select **USE**.

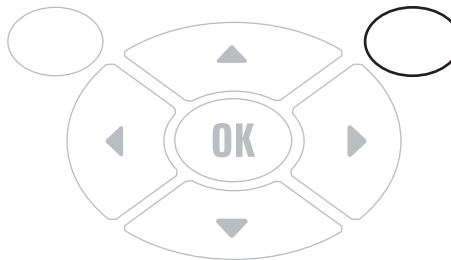


The printer restarts and uses the Virtual Device that you selected.

QLn320 and QLn220 Printers


1. From the printer's idle display screen, press the **LEFT SOFT KEY** to select the Home icon.

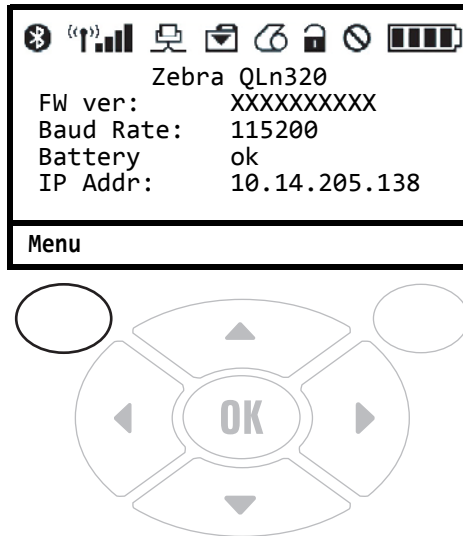


The printer displays the Home Menu.

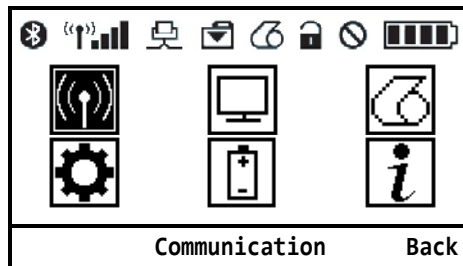


2. Use the **ARROWS** to navigate to the **SETTINGS** menu.

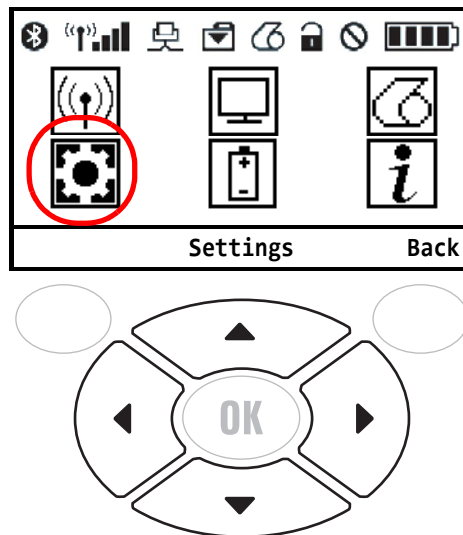


3. Press **OK**.

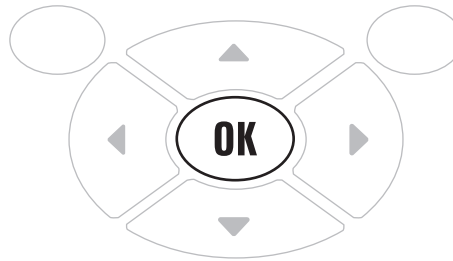



The printer displays the **VIRTUAL DEVICE** selection screen.

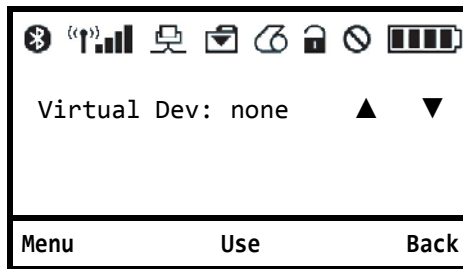


4. Press the **RIGHT ARROW** to highlight the up arrow on the display.

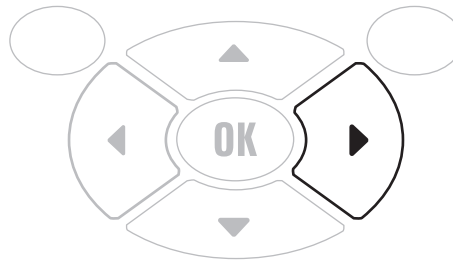


5. With the up arrow highlighted, press the **OK** button until you scroll to the **APL-D** option.

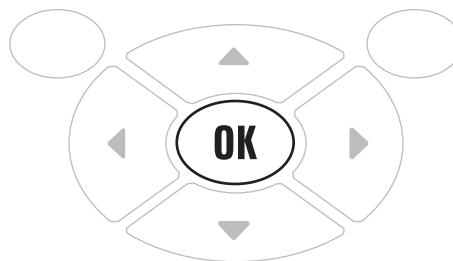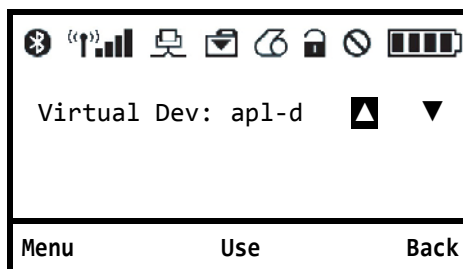

6. Press the **LEFT ARROW** to highlight **APL-D**

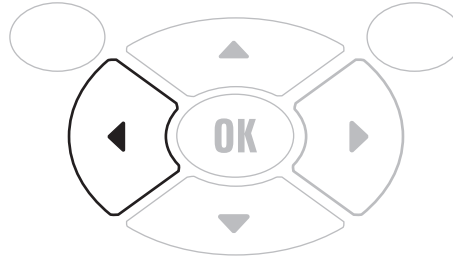

7. Press **OK** to select **USE**.

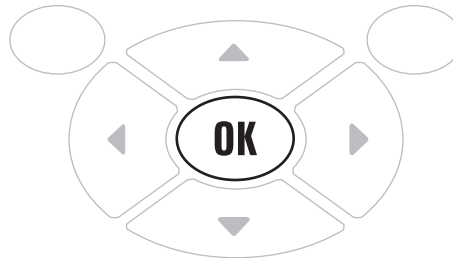

The printer restarts and uses the Virtual Device that you selected.

Supported ZTxxx and ZDxxx PRINTERS with a Display




Note • The ZT230 control panel is shown in this procedure. The control panel for the other printers is similar.

1. From the printer's idle display screen, press the **LEFT SELECT KEY** to select the Home icon.




The printer displays the Home Menu.

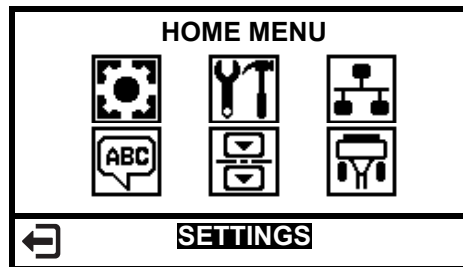

2. Use the **ARROWS** to navigate to the **LANGUAGE** menu.




3. Press **OK**.

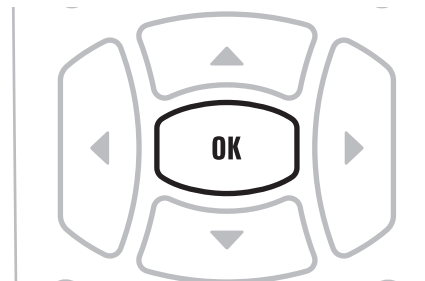


The printer displays the **LANGUAGE** selection screen.



4. Use the **LEFT** or **RIGHT ARROW** to navigate to the **VIRTUAL DEVICE** selection screen.

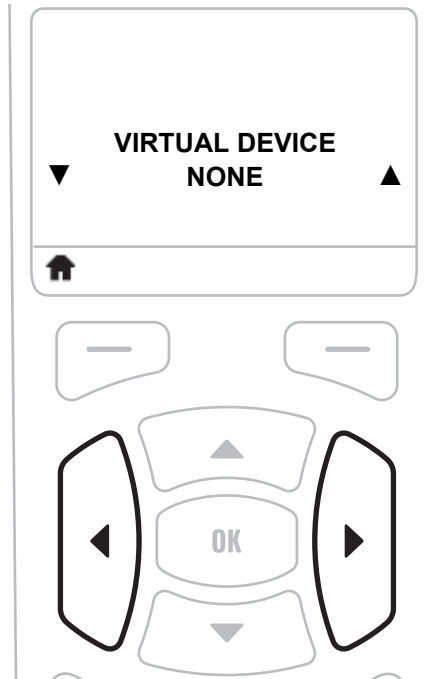

5. Use the **UP** or **DOWN ARROW** to scroll to the **APL-D** option.

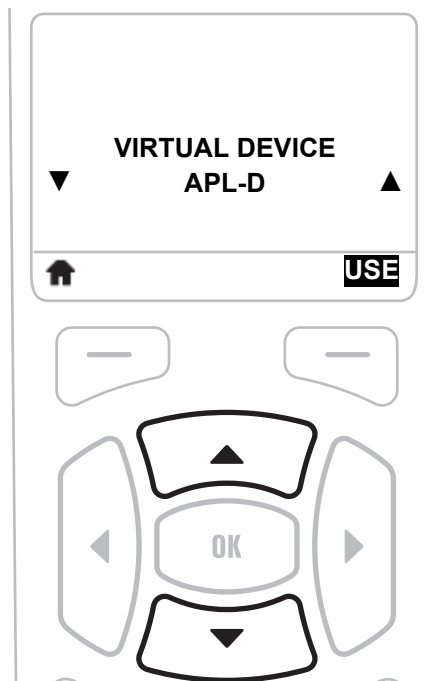

6. Press the **RIGHT SOFT KEY** or **OK** to select **USE**.



The printer restarts and uses the Virtual Device that you selected.

Commands

This section provides a detailed listing of commands for use on your Zebra printer with Virtual Device-O app.

Contents

Supported Commands	37
Line Print Commands	37
Easy Print Commands	38
Query Commands	38
PK80 Commands	39
MF8i Commands	39
Line Print Commands	40
CR	40
ESC ! n	40
ESC @	41
ESC A n	41
ESC B, ESC E	42
ESC EZ	43
ESC Hn	43
ESC Q n1n2	43
ESC R n	44
ESC V n1 n2	45
ESC w n	46
FF	47
LF	47
SI	47
SO	48
Easy Print Commands	49
Ahead Command {AHEAD:nnn}	49
Back Command {BACK:nnn}	49
Line Printer Mode {LP}	49

Contents (Continued)

Print {Print...}	50
Status {S}	54
Self Test Printout {TP}	54
Limited Self Test Printout {TP1}	54
Query Commands	55
ESC {BT?}	55
ESC {CF?}	56
ESC {FM?}	58
ESC {FN?}	59
ESC {GR?}	60
ESC {MY?}	61
ESC {PH?}	62
ESC {RE!}	62
ESC {ST?}	63
ESC {VR?}	65
Query Command Override	66
Set/Get/Do (SGD) Commands	67

Supported Commands

Line Print Commands

Table 1 • Supported Line Print Commands

Command	Description	Supported	Comments/See Also
CAN	Cancels a buffer line	No	N/A
CR	Enters a carriage return	Yes	CR on page 40
ESC ! n	Sets double-high or double-wide print mode for one line	Yes	ESC ! n on page 40
ESC @	Resets the printer	Yes	ESC @ on page 41
ESC A n	Sets interline spacing	Yes	ESC A n on page 41
ESC B	Begins acceptance of compressed graphics	Yes	ESC B , ESC E on page 42
ESC C n	Sets form length	Yes	Consumes, but does not process
ESC E	Ends acceptance of compressed graphics	Yes	ESC B , ESC E on page 42
ESC EZ	Goes to Easy Print [®] mode	Yes	ESC EZ on page 43
ESC Hn	Increases the height of the font <i>n</i> times.	Yes	ESC Hn on page 43
ESC Q n1n2	Advances the specified distance from the black mark	Yes	ESC Q n1n2 on page 43
ESC R n	Selects an international character set	Yes	ESC R n on page 44
ESC V n1 n2	Enters bitmapped graphics mode	Yes	ESC V n1 n2 on page 45
ESC w n	Selects a font	Yes	ESC w n on page 46
FF	Form feed (goes to top of form)	Yes	FF on page 47
LF	Line feed (advances paper)	Yes	LF on page 47
SI	Sets single-wide print mode	Yes	SI on page 47
SO	Sets double-wide print mode	Yes	SO on page 48

Easy Print Commands

Table 2 • Supported Easy Print Commands

Command	Description	Supported	Comments/See Also
{AHEAD:nnn}	Advances the paper	Yes	<i>Ahead Command {AHEAD:nnn} on page 49</i>
{BACK:nnn}	Moves the paper back	Yes	<i>Back Command {BACK:nnn} on page 49</i>
{IPL:0xAA55}	Initial program load	No	Consumes, but does not process
{LP}	Line printer mode	Yes	<i>Line Printer Mode {LP} on page 49</i>
{Print ...}	Print	Yes	<i>Print {Print...} on page 50</i>
{S}	Status	Yes	<i>Status {S} on page 54</i>
{TP}	Prints self-test results	Yes	<i>Self Test Printout {TP} on page 54</i>
{TP1}	Prints limited self-test results	Yes	<i>Limited Self Test Printout {TP1} on page 54</i>

Query Commands

Table 3 • Supported Query Commands

Command	Description	Supported	Comments/See Also
ESC {BT?}	Returns battery voltage and temperature	Yes	<i>ESC {BT?} on page 55</i>
ESC {CF?}	Returns information about configurable options	Yes	<i>ESC {CF?} on page 56</i>
ESC {CNI!}	Cancels demand printing	No	Consumes, but does not process
ESC {DQ?}	Returns remaining quantity of images	No	Consumes, but does not process
ESC {FM?}	Returns a list of all formats currently saved to the printer	Yes	<i>ESC {FM?} on page 58</i>
ESC {FN?}	Returns a list of all available fonts	Yes	<i>ESC {FN?} on page 59</i>
ESC {GR?}	Returns a list of all graphics currently saved to the printer	Yes	<i>ESC {GR?} on page 60</i>
ESC {MR?}	Returns the magnetic card reader configuration	No	Consumes, but does not process

Table 3 • Supported Query Commands (Continued)

Command	Description	Supported	Comments/See Also
ESC {MY?}	Returns the amount of memory available, used, and remaining	Yes	ESC {MY?} on page 61
ESC {PH?}	Returns information about the printhead	Yes	ESC {PH?} on page 62
ESC {RE!}	Resets the printer	Yes	ESC {RE!} on page 62
ESC {RS?}	Returns data read for a swiped magnetic card	No	Consumes, but does not process
ESC {ST?}	Returns information about the printer's status	Yes	ESC {ST?} on page 63
ESC {VR?}	Returns the version number of the firmware, boot block, and downloaded files	Yes	ESC {VR?} on page 65

PK80 Commands

Table 4 • Supported PK80 Commands

Command	Description
DC2 (0x12)	Sets the pica pitch mode and cancels the double-wide, emphasized, and condensed modes.
DC4 (0x14)	Cancels the double-wide mode set by SO.
SO (0x0E)	Sets double-wide mode (if not in condensed mode) for one line only and cancels the condensed mode (if not in condensed mode).
SI (0x0F)	Sets condensed mode (if not in double-wide mode) and cancels the double-wide mode (if in double-wide mode).
Esc! (0x00)	Enables 10 cpi
Esc! (0x01)	Enables 12 cpi

MF8i Commands

Table 5 • Supported MF8i Commands

Command	Description
Esc W1	Double-wide printing on
Esc W0	Double-wide printing off
Esc e	End print job status report
Esc :	Set Elite pitch (12 cpi)

Line Print Commands

CR

Description Carriage Return

Syntax CR

ASCII equivalent	CR
Decimal equivalent	13
Hex equivalent	0D

Notes Like the Line Feed command (see [LF on page 47](#)), the Carriage Return command prints the line and advances the paper. Both commands are available for the convenience of programmers who may be used to using one or the other. To print and advance a number of lines, use that number of CR commands, LF commands, or a combination of the two.

ESC ! n

Description Sets double-high and double-wide print mode for one line.

Syntax <ESC>!n

ASCII equivalent	ESC	!	n
Decimal equivalent	27	33	n
Hex equivalent	1B	21	n

Range Set the value for *n* as described below:

n =		Description
10h	16d	Double High
20h	32d	Double Wide
30h	48d	Double High and Double Wide

Notes Changes the font height, font width, or both to double the size for one line. This command applies to the entire line.

ESC @

Description Resets the printer

Syntax <ESC>@

ASCII equivalent	ESC	@
Decimal equivalent	27	64
Hex equivalent	1B	40

Default 20.4 cpi font (*n* = 33 decimal, 21 hexadecimal)

Range 21–26 hex

Notes Resets the printer to defaults.

ESC A *n*

Description Sets the interline spacing

Syntax <ESC>A*n*

ASCII equivalent	ESC	A	<i>n</i>
Decimal equivalent	27	65	<i>n</i>
Hex equivalent	1B	41	<i>n</i>

Default *n* = 0

Range 1–155

Notes In the command syntax, *n* (an 8-bit binary number) represents the number of blank dot lines fed between character lines. After the completion of the current line, the *n* blank lines are added before the next line begins printing.

ESC B, ESC E

Description Accepts (ESC B) or ends acceptance of (ESC E) compressed graphics

Syntax <ESC>B

ASCII equivalent	ESC	B
Decimal equivalent	27	66
Hex equivalent	1B	42

Syntax <ESC>E

ASCII equivalent	ESC	E
Decimal equivalent	27	69
Hex equivalent	1B	45

Notes The printer accepts compressed graphics data, which is then uncompressed and printed.

After you send the command to accept graphics data (ESC B), each dotline must begin with one of the following letters:

- U = uncompressed dotline
- G = compressed dotline (using a run-length encoding scheme)
Compressed graphics mode requires a graphic image the same width as the printhead in use.
- A = advance the specified number of dotlines
An A followed by a single byte count indicates the number of dotlines to advance.

When all data has been sent, the final bytes must be ESC E to end acceptance of compressed graphics data.

This command uses the SGD “apl.o.graphics_byte_width” to specify the byte width of the graphic. The default value for this setting is the width of the printhead.

Printhead Width	Dots Across	Bytes Across	Dots Per Inch
2 in.	384	48	203
3 in.	576	72	203
4 in.	832	104	203

ESC EZ

Description Goes to Easy Print mode.

Syntax <ESC>EZ

ASCII equivalent	ESC	E	Z
Decimal equivalent	27	69	90
Hex equivalent	1B	45	5A

Notes Places the printer in Easy Print mode. (You must use uppercase letters.)

ESC Hn

Description Increases the height of the font *n* times.

Syntax <ESC>H*n*

ASCII equivalent	ESC	H	<i>n</i>
Decimal equivalent	27	72	<i>n</i>
Hex equivalent	1B	48	<i>n</i>

Notes Multiply the height of the font by the number specified by *n*. This command applies to the entire line.

ESC Q n1n2

Description Advances the specified distance from the black mark

Syntax <ESC>Q *n1 n2*

ASCII equivalent	ESC	H	<i>n1n2</i>
Decimal equivalent	27	81	<i>n1n2</i>
Hex equivalent	1B	51	<i>n1n2</i>

Notes Advance the paper *n1n2* dot lines from the black mark (Q mark).

ESC R n

Description Selects an International character set.

Syntax <ESC>Rn

ASCII equivalent	ESC	R	n
Decimal equivalent	27	82	n
Hex equivalent	1B	52	n

Notes Set the value for n as described below:

n	Country
0	USA
1	France
2	Germany
3	UK
4	Denmark
5	Sweden
6	Italy
7	Spain

ESC V n1 n2

Description Enters bitmapped graphics mode.

Syntax <ESC>V n1n2

ASCII equivalent	ESC	V	n1n2
Decimal equivalent	24	86	n1n2
Hex equivalent	1B	56	n1n2

Notes In the command syntax, the next ($n1 * 254 + n2$) dot lines are printed as bitmapped graphics. The command is used to print user-generated bitmaps across the width of the printhead. After receipt of this command, the printer dumps the binary data supplied directly to the printhead. A bit set to 1 means the dot is on, and a bit set to 0 means the dot is off.

Graphics printed using this command must be the exact width of the printhead in bits. Bit 7 of the first byte of data received prints at the left-most dot on the printhead as you view the printhead with the paper feeding away from you. The printer remains in bitmapped graphics mode until the number of bytes necessary to fill the specified number of lines of print have been received by the printer.

This command uses the SGD command `apl.o.graphics_byte_width` to specify the byte width of the graphic. The default value for this setting is the width of the printhead.

Printhead Width	Dots Across	Bytes Across	Dots Per Inch
2 in.	384	48	203
3 in.	576	72	203
4 in.	832	104	203

ESC w n

Description Selects a font

Syntax <ESC>wn

ASCII equivalent	ESC	w	n
Decimal equivalent	27	119	n
Hex equivalent	1B	77	n

Default MF204, a 20.4 cpi font (n = 33 decimal or 21 hexadecimal)

Notes Selects a font (see [Table 6](#)), given n, a binary eight-bit number. The first three fonts in the table are permanent fonts. The next four may be removed.

Table 6 • Line Printer Mode Fonts

Name	Font Characters/Inch	ASCII	Dec	Hex	Dots Wide	Dots High	Description
MF055	5.5	#	35	23	37	39	96 chars large block
MF072	7.2	"	34	22	28	31	96 chars large block
MF102	10.2	(space) character	32	20	20	26	223 chars medium block bold
MF107	10.7	&	38	26	19	26	96 chars large block bold
MF185	18.5	\$	36	24	11	24	96 chars large block
MF204	20.4	!	33	21	10	24	224 chars block normal
MF226	22.6	%	37	25	9	24	97 chars small block
IM5X7	22.1	?	63	3F	5	7	96 chars impact 5×7
IM5X8	22.1	@	64	40	5	8	96 chars impact 5×8

Note: For more specific information about fonts, see [Table 7, Supported Fonts on page 70](#).

FF

Description Form feed (goes to top of form)

Syntax FF

ASCII equivalent	FF
Decimal equivalent	12
Hex equivalent	0C

Notes Prints the line and advances the paper to top of the next form.

LF

Description Line feed (advances paper)

Syntax LF

ASCII equivalent	LF
Decimal equivalent	10
Hex equivalent	0A

Notes Like the Carriage Return command (see [CR on page 40](#)), the Line feed command prints the line and advances the paper. Both commands are available for the convenience of programmers who may be used to using one or the other. To print and advance a number of lines, use that number of CR commands, LF commands, or a combination of the two.

SI

Description Sets single-wide print mode

Syntax SI

ASCII equivalent	SI
Decimal equivalent	15
Hex equivalent	0F

Notes Prints the current font in single width. Effectively cancels an [SO](#) (double-wide printing) command.

SO

Description Sets double-wide print mode

Syntax SO

ASCII equivalent	SO
Decimal equivalent	14
Hex equivalent	OE

Notes Prints the current font in double width until an [SI](#) (single-wide printing mode) command or a Carriage Return ([CR](#)) is received to cancel it.

Easy Print Commands

Easy Print commands have a unique syntax. The left bracket begins the command set, followed by the command. The right bracket ends the command set.



Example • For the Easy Print command `{Ahead:nnn}`, enter the following:

```
{
AHEAD:nnn
}
```

Ahead Command `{AHEAD:nnn}`

Description `AHEAD:nnn` or `Ahead:nnn` or `A:nnn` advances the paper by `nnn` dotlines. The Ahead command is an alternative to manually advancing the paper.

Syntax `{AHEAD:nnn}`

Range 1–65,000

Notes The command must be enclosed in left and right brackets.

Back Command `{BACK:nnn}`

Description `BACK:nnn` or `Back:nnn` or `B:nnn` backs up the paper by `nnn` dotlines. The Back command repositions the edge of the paper for minimum paper waste.

Syntax `{BACK:nnn}`

Range 1–200

Notes The command must be enclosed in left and right brackets.

Line Printer Mode `{LP}`

Description `LP` places the printer in Line Printer mode.

Syntax `{LP}`

Notes The command must be enclosed in left and right brackets. `{LP}` is not a Line Printer Mode command. Execute this command only from the Easy Print Mode. If you execute this command from within Line Printer Mode by mistake, your label or receipt will include “`{LP}`” on it.

Print {Print...}

Description “Print...” initiates a limited self-test printout that includes all possible printer actions to stop the paper or rotate an image, all possible print images, and all possible options used to alter those images.

Syntax {Print,Global Options:@row,column:Name,Field Options|data|}

Parameter	Definition
{	A left bracket begins the command set.
Print,	Include a comma after the Print command if there are one or more global options. If there are no global options, follow the Print command with a colon.
Global Options:	See Names on page 52 . If more than one global option is used, separate them with commas. Follow the last global option with a colon.
@row,column:	@row, column : specifies the row and column where the text or graphic image will appear. Separate the row and column numbers with a comma (no spaces after the @ symbol or around the comma). The range for the rows is 1-65,000. In a typical print request, there may be five or more @row, column parameters for a single word Print .
Name,	Include the name of the text, barcode, line, or graphic to be printed. The name must always be five characters (no spaces), including graphics that you name yourself. See Names on page 52 for more information.
Field Options	See Field Options on page 53 . Specify the field options that will be used to increase the size of fonts, barcodes, graphics, or lines. If more than one field option is used, separate them with commas.
Data	Specify the data to be printed or turned into a barcode. Surround the data with vertical bars.
}	A right bracket ends the command set.

Notes

- The command must be enclosed in left and right brackets.
- You can use a single print command for multiple print lines (called a print request). This means that you do not have to repeat the word “Print” every time you want to print another line of text.

Print {Print...} (continued)

Global Options

AHEADnnn

nnn = 1–65,000

Advances the paper the specified number of dotlines before printing.

BACKnnn

nnn = 1–200

Backs up the paper the specified number of dotlines before printing.

QSTOPnnn

nnn = a number from 1–65,000

Stops printing nnn dotlines after sensing a black mark. The printer stops even if it has not completed the label or receipt image that it was printing.

ROTn

n = 0, 90, 180, 270

Rotates the printed image in 90-degree increments.

STOPnnn

nnn = a number from 1–65,000

Stops printing nnn dotlines after beginning printing a label or receipt image.

Print {Print...} (continued)

Names

Fonts Fonts and their 5-character names are listed in [Table 7 on page 70](#).

Barcodes

Barcode	5-Character Name
Codabar	COBAR
Code 39 (2:1 ratio)	BC39N
Code 39 (3:1 ratio)	BC39W
Code 93	BC093
Code 128	BC128
EAN-8	EAN08
EAN-13	EAN13
Interleaved 2 of 5 (ratio 2.5 to 1)	BC125
Interleaved 2 of 5 (ratio 2 to 1)	I2OF5
MSI/Plessey	PLESY
UCC/EAN-128	EN128
UPC-A	UPC-A
UPC-E	UPC-E
PDF417	PD417
Aztec	AZTEC
QR	QR_BC

Lines To draw a line, specify the type of line, the line length, and the line thickness using the parameters below. Follow the line specifications with a single vertical bar, such as

```
{PRINT: @50,20:HLINE,length 250,thick 2|}
```

HLINE or **H**

Draws a horizontal line.

VLINE or **V**

Draws a vertical line.

lengthnnn or **Lnnn**

Sets the line length to *nnn* dots

thickn or **Tn**

Sets the line thickness to *n* dots.

Print {Print...} (continued)

Field Options

HMULTn or HMn

n = 1–255

Enlarges text or graphics n times horizontally.

VMULTn or Vn

n = 1–255

Enlarges text or graphics n times vertically.

HIGHn or Hn

n = 1–255

Changes the height of a barcode in 5 dot intervals. Default is 5 dots.

WIDEn or Wn

n = 1–255

Multiplies the width of a barcode by n. Default is 1.

Status {S}

Description `S` returns a fixed status string, which includes paper status, head latch status, and power status.

Syntax {S}

Reply Syntax {U:1234;x;y;z;RDY}

where `x` = paper status (P for paper, N for no paper)
`y` = head latch (D for closed, U for open)
`z` = power status (O for Ok, V for voltage error)

Notes The command must be enclosed in left and right brackets.

Self Test Printout {TP}

Description `TP` initiates a self-test printout.

Syntax {TP}

Notes The command must be enclosed in left and right brackets.

Limited Self Test Printout {TP1}

Description `TP1` initiates a limited self-test printout. (Prints the same output as the `{TP}`, which is a two-key report.)

Syntax {TP1}

Notes The command must be enclosed in left and right brackets.

Query Commands

Query commands take the format `ESC {Query?}` where `Query` is replaced with a specific command.

ESC {BT?}

Description A BATTERY query returns the current battery voltage and temperature.

Query Syntax `ESC{BT?}`

Reply Syntax `{BT!V:x;T:x,CH:x}`



Example •

`{BT!V:6.8;T:+25.8C,CH:C}`

`BT!` This reply is to a BATTERY query.
`V:6.8` The current battery voltage is 6.8 Volts.
`T:+26.0C` Battery temperature is 26.0 C.
`CH:C` Complete charge.

Parameter	Reply	Definition
v = voltage	n.n	Volts
T = temperature	±nn.nC	Current temperature of the battery.
CH = charge	C	Complete
	F	Fast Charge
	I	Initialization
	N	No Charge
	T	Trickle Charge
	W	Wait to restart
SB00 . . . SBnn = Reserved	TBD	Future option

ESC {CF?}

Description A CONFIGURATION query returns information about configurable options.

Query Syntax ESC{CF?}

Reply Syntax {CF!L:x;B:x;P:x;N:x;H:x;D:x;Y:x;S:x;T:x}



Example •

```
{CF!L:LP;B:096;P:N;N:8;H:B;D:+10%;Y:1;S:Y;T:0060}
```

CF!	This reply is to a CONFIGURATION query.
L:LP	Default mode = Line Printer mode.
B:096	Baud rate = 9600.
P:N	No parity.
N:8	8 data bits.
H:B	Hardware and software handshaking are enabled.
D:+10%	Darkness (burn time) = +10%
Y:1	Paper = single ply
S:Y	Sound = on
T:0060	Timeout = 60 seconds

Parameter	Reply	Definition
L = default mode	LP	Line Printer
	EZ	Easy Print (EZ)
B = baud rate	012, 024, 048, 096, 192, 384	1200, 2400, 4800, 9600, 19200, or 38400
P = parity	N	None
	E	Even
	O	Odd
N = number of data bits	7, 8	7 or 8 data bits
H = handshaking	N	None
	H	Hardware
	S	Software
	B	Both
D = darkness	-25% to +35%	-25%, -20%, -15%, -10%, -05%, 0%, +5%, +10%, +15%, 20%, +25%, +30%, +35%
	D	Down
Y = ply of paper	1	Single ply
	2	Double ply

Parameter	Reply	Definition
S = beeper (sound)	Y	Yes
	N	No
T = timeout value in seconds	nnnn	9999 = no timeout/always on

ESC {FM?}

Description A FORMAT query returns a list of the formats currently saved to the printer. Within a complete format definition, the query parameters are separated from each other by commas. Different formats are separated by a semicolon, carriage return, and line feed (; <CR> <LF>).

Query Syntax ESC {FM?}

Reply Syntax {FM!N5:x,L:x,UV:x,UD:x,US:x}



Example •

```
{FM!N5:LABEL,L:D,UV:1,UD:06/19/06,US:SHIPPING LABEL1}
```

FM!	This reply is to a FORMAT query.
N5:LABEL	The format's five-character name is LABEL.
L:D	This is a downloaded format.
UV:1	The user version is 1.
UD:06/19/06	The user date is 06/19/06.
US:SHIPPING LABEL1	The user descriptive summary is SHIPPING LABEL1.

Parameter	Reply	Definition
N5	xxxxxx	Five-character format name
L	R = Resident	Location
	D = Downloaded	
UV	x	User version number
UD	mm/dd/yy	User date (month/day/year)
US	x...x (20 chars)	User description of format

ESC {FN?}

Description A FONT query returns a list of the available fonts (permanent and downloaded). Within a complete font definition, the query parameters are separated from each other by commas. Different fonts are separated by a semicolon, carriage return, and line feed (; <CR> <LF>).

Query Syntax ESC{FN?}

Reply Syntax {FN!N5:x,N1:x,L:x,UV:x,UD:x,US:x,CPI:x}



Example •

```
{FN!N5:MF107,N1:&(26),L:R,UV:1,UD:04/02/06,  
US:96CHARS BLOCKBOLD,CPI:10.7;
```

```
N5:MF204,N1:!(21),L:D,UV:1,UD:04/02/06,  
US:224 CHR BLOCK NORMAL,CPI:20.4}
```

FN!	This reply is to a FONT query.
N5:MF107	The first font has the name MF107.
N1:&(26)	The one-character name is &, which is 26 in hexadecimal.
L:R	The first font is a resident font.
UV:1	The user version is 1.
UD:04/02/06	The user date is 04/02/06.
US:96CHARS BLOCKBOLD	The font is a 96-character block bold font.
CPI:10.7	The font has 10.7 characters per inch.
N5:MF204	The next font begins and is read similarly.

Parameter	Reply	Definition
N5	xxxxxx	Five-character font name
N1	x(nn)	One-character name followed by the hexadecimal value.
L	R = Resident	Location
	D = Downloaded	
UV	x	User version number
UD	mm/dd/yy	User date (month/day/year)
US	x...x (20 chars)	User description of font
CPI	nn.n	Number of font characters per inch

ESC {GR?}

Description A GRAPHICS query returns a list of the graphics that are currently downloaded to the printer. Within a complete graphic definition, the query parameters are separated from each other by commas. Different graphics are separated by a semicolon, carriage return, and line feed (; <CR> <LF>).

Query Syntax ESC{GR?}

Reply Syntax {GR!N5:x;N1:x,L:x,UV:x,UD:x,US:x}



Example •

```
{GR!N5:LOGO1,N1:z(7A),L:D,UV:1,UD:06/19/96,US:LOGO}
```

GR!	This reply is to a GRAPHICS query.
N5:LOGO1	The graphic has the five-character name, LOGO1.
N1:z(7A)	The one-character name is z, which is 7A in hexadecimal.
L:D	This graphic was downloaded.
UV:1	The user version is 1.
UD:06/19/06	The user date is 06/19/06.
US:LOGO	The user descriptive summary is LOGO.

Parameter	Reply	Definition
N5	xxxxx	Five-character graphic name
N1	x (nn)	One-character name followed by the hexadecimal value.
L	R = Resident	Location
	D = Downloaded	
UV	x	User version number
UD	mm/dd/yy	User date (month/day/year)
US	x...x (20 chars)	User description of graphic

ESC {MY?}

Description A MEMORY query returns the size of all memory available in the printer, including the amount used and the amount remaining for the application.

Query Syntax ESC {MY?}

Reply Syntax {MY!FS:x;FM:x;RS:x;DT:x;DR:x}



Example •

```
{MY!FS:64M;FM:AMD;RS:8M;DT:065536;DR:063952}
```

MY!	This reply is to a MEMORY query.
FS:64M	The printer contains a 64 MB Flash memory.
FM:AMD	Flash manufacturer: response is always AMD.
RS:8M	RAM Size = 8M
DT:065536	Total Flash area available for download is 65,536 kilobytes.
DR:063952	Download Flash memory remaining.

Parameter	Reply	Definition
FS	nM	Flash size: n = size of the flash memory in megabytes
FM	AMD	Flash manufacturer
RS	nM	Ram size: n = size of the RAM in megabytes
DT	nnnnnn	Download total area: nnnnnn = size of Flash memory in kilobytes
DR	nnnnnn	Download Flash remaining: nnnnnn = size of the Flash memory that is free in kilobytes

ESC {PH?}

Description A PRINthead query returns information about the printhead used in the printer.

Query Syntax ESC{PH?}

Reply Syntax {PH!TD:x;DD:x;M:x;T:x}



Example •

```
{PH!TD:0384;DD:203;M:LPT3245;T:+31.0C}
```

PH!	This is a reply to a PRINthead query.
TD:0384	The print distance across the printhead is 384 dots.
DD:203	The dot density of the printhead is 203 dots per inch.
M:LPT3245	Response is always LPT3245.
T:+31.0C	The current printhead temperature is +31.0 C.

Parameter	Reply	Definition
TD	nnnn	Total number of dots across the printhead.
DD	nnn	Density of the printhead (dots per inch).
M	x...x (variable width)	Response is always LPT3245.
T	+nn.nC	Current temperature of the printhead.

ESC {RE!}

Description This command resets the printer.

Syntax ESC{RE!}

Reply Syntax ESC{RE!}

ESC {ST?}

Description A STATUS query shows whether the next print request can be done or returns information about errors from the previous print request.

Query Syntax ESC{ST?}

Reply Syntax {ST!E:x;L:x;P:x;R:x;B:x;H:x}



Example •

```
{ST!E:N;L:D;P:P;R:62;B:O;H:O}
```

```
ST!      This reply is to a STATUS query.
E:N      No errors were found.
L:       The printhead is latched, ready to print.
P:P      Media is present.
R:58    58K remains in the input buffer.
B:O     Battery voltage and temperature are acceptable.
H:O     The printhead temperature is acceptable.
```

Parameter	Reply	Definition
E = Error	N	No error *
	c	Command error (invalid command)
	d	Data error (such as a letter in a numeric-only barcode)
	f	Font not available
	g	Global parameter error
	o	Overrun of buffer *
	p	Field parameter error
	q	Black mark not found *
	r	Row/column error
L = Lever	U	Up
	D	Down
P = Paper	P	Present
	N	Not present
R = RAM	nn	Buffer size remaining in kilobytes
B = Battery condition	O	Okay
	T	Out of temperature range
	V	Out of voltage range

* Rows marked with an asterisk apply to both Easy Print and Line Printer modes. Rows without an asterisk apply only to Easy Print mode.

Parameter	Reply	Definition
H = Printhead temperature	O	Okay
	T	Out of range

* Rows marked with an asterisk apply to both Easy Print and Line Printer modes.
Rows without an asterisk apply only to Easy Print mode.

ESC {VR?}

Description A VERSION query returns the firmware, boot code, and download file versions.

Query Syntax ESC{VR?}

Reply Syntax {VR!F:x;C:x;B:x;D:x;H:x}



Example • {VR!F:6.65;C:5.40;B:5.10;D:1.3;H:5.08}

VR! This reply is to a VERSION query.
 F:6.65 Firmware version: response is always 6.65.
 C:5.40 Communication controller version: response is always 5.40
 B:5.10 Boot code version: response is always 5.10.
 D:1.3 Download file version: response is always 1.3.
 H:5.08 Response is always 5.08.

Parameter	Reply	Definition
F	n . nn	Firmware version
C	n . nn	Communication controller version
B	n . nn	Boot code version
D	n . n	Download (fonts, graphics, formats) version
H	n . nn	Response is always 5.08

Query Command Override

The query override command can be used to change the printer's response to an existing query or to have the printer respond to a new query. Note that, while the definition of the new response is arbitrary, the same value is sent each time the command is received. It is possible, though unlikely, that an application may require a variable response to a query command in order to function properly. If so, a modification to the printer firmware would be needed in that case.

Format: `Esc {ZQO?} "{command?}" "{response}"`

Where:

`Esc` = 1B hex

`{ZQO?}` = Command to create a new query/response

`"{command}"` = the command to be overridden, such as QST, {QST}

`"{response}"` = the response to send in response to the above query, such as {QST:JB:1234}



Example • Paragraph tag `x1_Example` brings up the singular word.

```
Esc {ZQO?} "{MD}" "{01/15/2008}"
```

Instructs the printer to respond as follows to the MD query: {01/15/2008}.

Query override commands can be saved in an `autoexec.bat` or `config.sys` file.

Set/Get/Do (SGD) Commands

The following SGD commands were added for use with your Virtual Device app. For more detailed information on SGD commands, see the Programming Guide for ZPL II®, ZBI 2, Set/Get/Do, Mirror, and WML (formerly the ZPL II Programming Guide).

apl.enable

Description This command enables or disables a Virtual Device app.



Note

- ZPL and CPCL may not function normally when a Virtual Device app is enabled.
- You must restart the printer after changing the value of `apl.enable`.

Type `setvar`

Commands	Details
<code>setvar</code>	<p>This command instructs the printer to set the RFID valid counter to zero.</p> <p><i>Format:</i> <code>! U1 setvar "apl.enable" "value"</code></p> <p><i>Values:</i></p> <ul style="list-style-type: none"> <code>"apl-o"</code> = enable Virtual Device O <code>"none"</code> = disable any Virtual Device app (ZPL and CPCL function normally)



Example 1 • This example shows how to enable the Virtual Device-O app:

```
! U1 setvar "apl.enable" "apl-o"
```



Example 2 • This example shows how to disable the Virtual Device-O app:

```
! U1 setvar "apl.enable" "none"
```

apl.version

Description This command returns the version of the currently running Virtual Device app.

Type `getvar`

Commands	Details
<code>getvar</code>	<i>Format:</i> <code>! U1 getvar "apl.version"</code>

apl.framework_version

Description This command returns the level of support for Virtual Devices in the printer operating system.

Type `getvar`

Commands	Details
<code>getvar</code>	<i>Format:</i> ! U1 <code>getvar "apl.framework_version"</code>

apl.o.graphics_byte_width

Description This command specifies the byte width of a graphic. The default value for this setting is the width of the printhead.

Printhead Width	Dots Across	Bytes Across	Dots Per Inch
2 in.	384	48	203
3 in.	576	72	203
4 in.	832	104	203

Type `setvar`

Commands	Details
<code>setvar</code>	<i>Format:</i> ! U1 <code>setvar "apl.o.graphics_byte_width" "value"</code> <i>Accepted Values:</i> 0 to the width of the printhead <i>Default Value:</i> the width of the printhead



Example • This example shows a byte width for a graphic being set at 35 bytes:

```
! U1 setvar "apl.o.graphics_byte_width" "35"
```

Supported Fonts

This section provides you with available fonts on the Zebra printers with Virtual Device-D.

Contents

Supported Fonts.	70
-----------------------	----

Supported Fonts

Table 7 shows the standard fonts and associated character sets that are provided with Virtual Device-O.

Table 7 • Supported Fonts

5-Char Name	1-Char Name	CPI [†]	Height [‡]	Width [‡]	Character Set
MF055	# (0×23)	5.5	39	37	96 ASCII chars (0×20-0×7E) ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ' a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~
MF072	" (0×22)	7.2	31	28	96 ASCII chars (0×20-0×7E) ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ' a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~

Notes

[†] CPI: Characters per inch


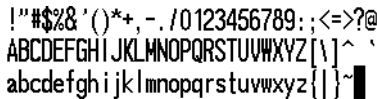

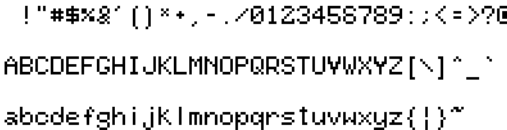
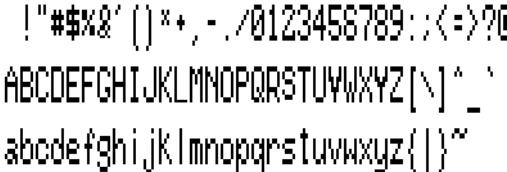
[‡] Height and Width: specified in dots (or pixels)

Table 7 • Supported Fonts (Continued)

5-Char Name	1-Char Name	CPI [†]	Height [‡]	Width [‡]	Character Set
MF102	Space (0×20)	10.2	26	20	223 CP437chars (0×20-0×7E) ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~ Ç ü é à á â ã ä å ç è é ê ë ì í î ï Ä Å Æ É æ Æ Ô Õ ö ù ÿ Ö Ü ø £ ¥ ¤ « » : ; ▒ α β γ π Σ σ μ τ Φ Θ Ω δ ∞ ϕ ε Π ≡ ± ≥ ≤ Γ J ÷ ≈ ° • √ ° ▀
MF107	& (0×26)	10.7	26	19	96 ASCII chars (0×20-0×7E) ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~
MF185	\$ (0×24)	18.5	24	11	96 ASCII chars (0×20-0×7E) ! " # \$ % & ' () * + , - . / 0 1 2 3 4 5 6 7 8 9 : ; < = > ? @ A B C D E F G H I J K L M N O P Q R S T U V W X Y Z [\] ^ _ ` a b c d e f g h i j k l m n o p q r s t u v w x y z { } ~

Notes
[†] CPI: Characters per inch
[‡] Height and Width: specified in dots (or pixels)

Table 7 • Supported Fonts (Continued)

5-Char Name	1-Char Name	CPI [†]	Height [‡]	Width [‡]	Character Set
MF204	! (0×21)	20.4	24	10	<p>224 CP437chars (0×20-0×7E)</p> 
MF226	% (0×25)	22.6	24	9	<p>96 ASCII chars (0×20-0×7E)</p> 
OCA1R	O (0×4F)	8.5	24	14	<p>ASCII digits only, rotated</p> 
PT05H	N/A	34	9	6	<p>96 ASCII chars (0×20-0×7E)</p>  <p>(Shown at twice its size for clarity.)</p>
PT05T	B (0×42)	34	24	6	<p>96 ASCII chars (0×20-0×7E)</p>  <p>(Shown at twice its size for clarity.)</p>

Notes

[†] CPI: Characters per inch

[‡] Height and Width: specified in dots (or pixels)

Table 7 • Supported Fonts (Continued)

5-Char Name	1-Char Name	CPI [†]	Height [‡]	Width [‡]	Character Set
PT06H	C (0×43)	25	12	8	96 ASCII chars (0×20-0×7E) !"#\$%&'()*+,-./0123456789:;<=>?@ ABCDEFGHIJKLMN O PQRSTU VWXYZ[\]^_` abcdefghijklmnopqrs tuvwxyz{ }~
PX004	a (0×61)	50	24	4	96 ASCII chars (0×20-0×7E) !"#\$%&'()*+,-./0123456789:;<=>?@ ABCDEFGHIJKLMN O PQRSTU VWXYZ[\]^_` abcdefghijklmnopqrs tuvwxyz{ }" (Shown at twice its size for clarity.)
PX005	c (0×63)	40	24	5	96 ASCII chars (0×20-0×7E) !"#\$%&'()*+,-./0123456789:;<=>?@ ABCDEFGHIJKLMN O PQRSTU VWXYZ[\]^_` abcdefghijklmnopqrs tuvwxyz{ }" (Shown at twice its size for clarity.)
PX007	d (0×64)	34	24	6	96 ASCII chars (0×20-0×7E) !"#\$%&'()*+,-./0123456789:;<=>?@ ABCDEFGHIJKLMN O PQRSTU VWXYZ[\]^_` abcdefghijklmnopqrs tuvwxyz{ }" (Shown at twice its size for clarity.)

Notes

[†] CPI: Characters per inch[‡] Height and Width: specified in dots (or pixels)

ZDownloader Utility

This section provides you with the instructions for downloading and installing the ZDownloader Utility.

Contents

Downloading the ZDownloader Utility	75
Installing the ZDownloader Utility	76

Downloading the ZDownloader Utility

To download the ZDownloader Utility, perform the following from your computer:

1. Open a web browser and navigate to <http://www.zebra.com>.
2. Click on the **Support & Downloads** header on the web page.
3. Select a printer.
4. When the printer page opens, locate and select the **Software Utilities** tab.
5. Scroll down to the ZDownloader Utility and select the **Download** link.



Note • You will be prompted to create a user profile or login to <http://www.zebra.com> with an existing profile to download the ZDownloader Utility.


6. Click on the **Accept and Begin Download Now** button.
The installation file download will begin.

Installing the ZDownloader Utility

To install the ZDownloader Utility, perform the following from your computer:


1. Run the installation file after the download is complete.
2. If you are prompted to allow the application to make changes to your computer, click **Yes**.

The utility installs on your computer. When installation is complete, the Firmware Downloader and ZBI Key Manager installation wizard appears.

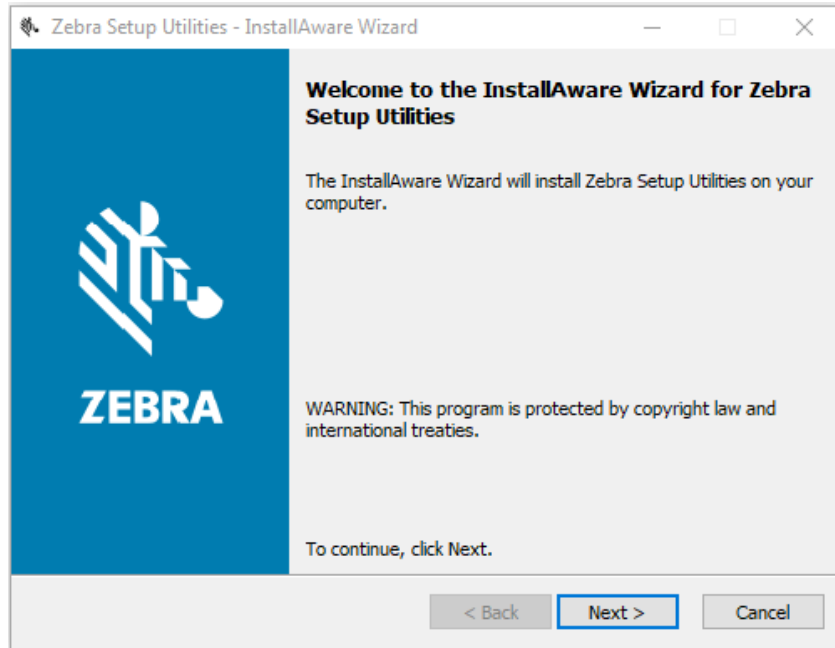

3. Click **Next**.
The End User License Agreement appears.


4. Read the terms of the agreement.

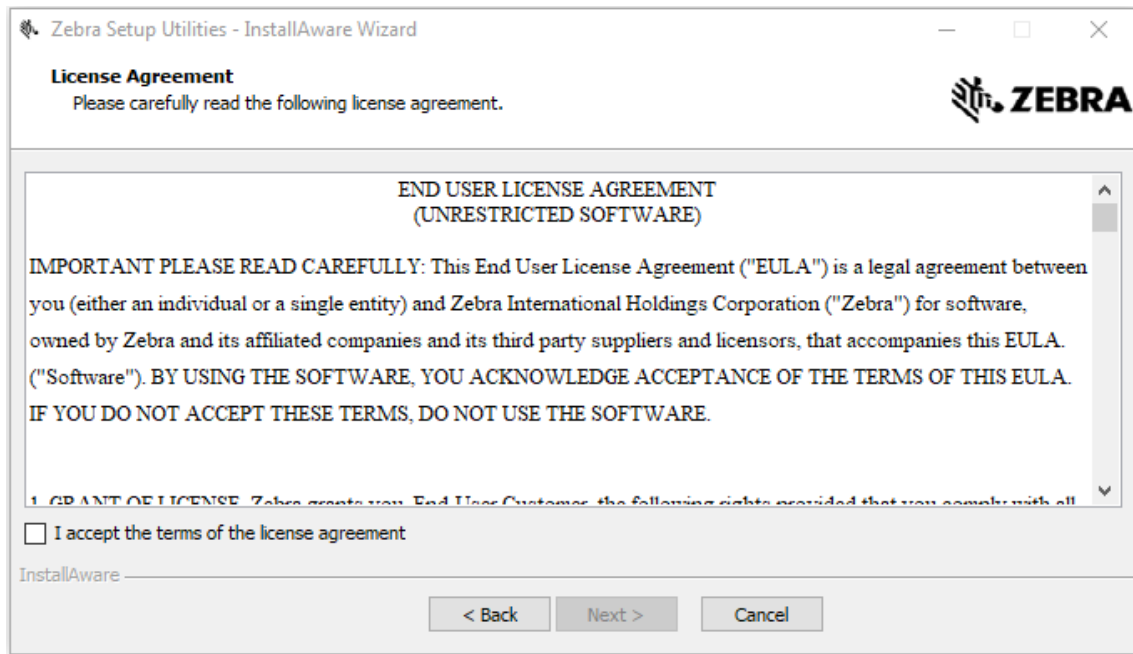

5. Click the **checkbox** to accept the terms.


6. Click **Next**.

The installation wizard displays information about the installation.

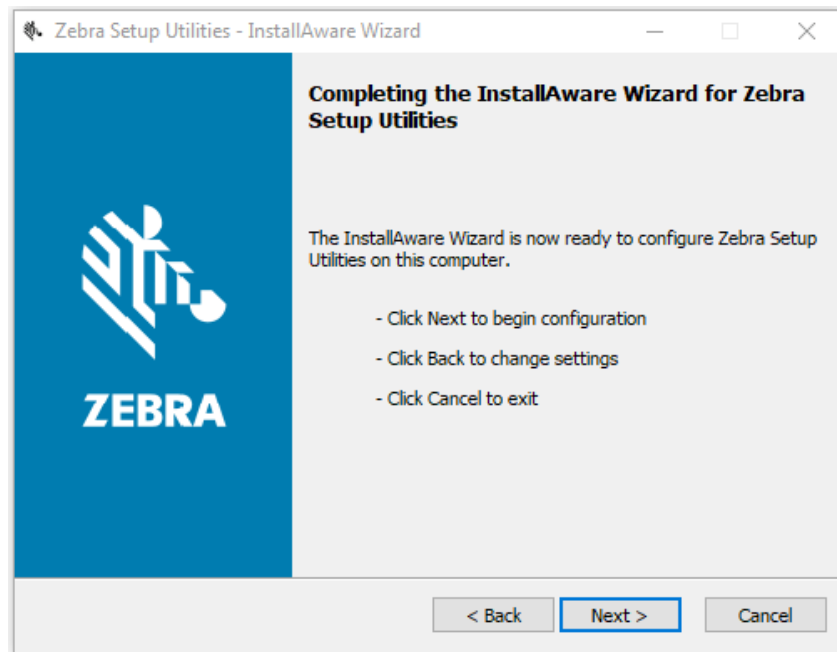

7. Click **Next**.

The installation wizard installs the application.

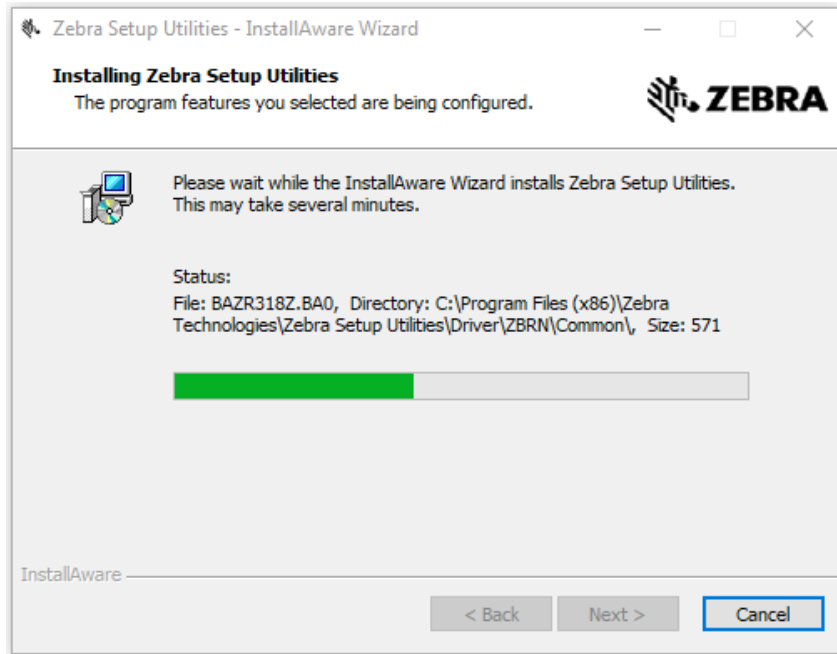

8. Click **Finish** to close the wizard.



Index

A

- advance paper from black mark (Q mark), 43
- ahead command, 49
- application installation
 - acquiring the app, 11
 - canceling a download in progress, 22
 - downloading the app to printers, 20
- auto-detect printers, 13

B

- back command, 49
- barcodes
 - names, 52
- battery voltage and temperature command, 55
- bitmapped graphics, 45
- black mark, 43
- byte width, 68

C

- carriage return, 40
- compressed graphics, 42
- configurable options command, 56
- connectivity options, 8

D

- disabling the Virtual Device
 - by apl.enable SGD command, 67
 - through the control panel
 - QLn320 and QLn220 printers, 28
 - QLn420 printers, 25
 - Supported ZTxxx And ZDxxx Printers With

- A Display, 31
 - ways to enable/disable, 24
- double-high print, 40
- double-wide print
 - set as print mode, 48
 - set for one line, 40

E

- Easy Print
 - go to from Line Print, 43
 - supported commands, 38
- enabling the Virtual Device
 - by apl.enable SGD command, 67
 - Supported ZTxxx And ZDxxx Printers With A Display, 31
 - through the control panel
 - QLn320 and QLn220 printers, 28
 - QLn420 printers, 25
 - ways to enable/disable, 24

F

- features, 7
- fonts
 - character sets and specifications, 70
 - double-wide print, 48
 - enlarge height, 43
 - query command, 59
 - select, 46
 - single-wide print, 47
- form feed, 47
- formats command, 58

G

generate Easy Print print request, 50
 graphics
 bitmapped, 45
 compressed, 42
 query command, 60
 specify byte width of a graphic, 68

H

heighten font, 43

I

interline spacing, 41
 IP Ethernet printers
 auto-detect, 13
 manually add, 14

L

liability, 2
 line feed, 47
 Line Print
 go to from Easy Print, 49
 supported commands, 37

M

manually add printers, 14
 memory query command, 61
 MF8i supported commands, 39
 modifying printer communication settings
 through ZDownloader, 18

O

override query command, 66

P

parallel printers, 14
 PK80 supported commands, 39
 print requests, 50
 print servers, 8
 print width
 double-wide font mode, 48
 single-wide font, 47
 printhead query command, 62

Q

Q mark, 43

query

 query command override, 66
 supported commands, 38

R

reset printer
 Line Print command, 41
 query command, 62

S

select an international character set, 44
 select font, 46
 self-test printout
 {TP}, 54
 {TP1}, 54
 serial interface
 add printers, 14
 Set/Get/Do (SGD) commands, 67
 single-wide print, 47
 status command
 Easy Print mode, 54
 query mode, 63

U

USB printers, 13

V

version
 level of support for Virtual Devices, 68
 of Virtual Device, 67
 query command, 65
 Virtual Device version, 67

W

wired print server
 auto detect, 13
 for more information, 8
 manually add, 14
 wireless print server
 auto detect, 13
 for more information, 8
 manually add, 14

Z

ZDownloader
 adding printers, 12
 canceling a download in progress, 22
 deleting printers, 19
 downloading the Virtual Device app to printers,

20
downloading ZDownloader, 75
installing ZDownloader, 76
modifying printer settings, 18

zebra printer setup utility for android devices, 12



Corporate Headquarters

Zebra Technologies Corporation
3 Overlook Point
Lincolnshire, IL 60069 USA
T: +1 847 634 6700
Toll-free +1 866 230 9494
F: +1 847 913 8766

<http://www.zebra.com>